

## BEFORE YOU GET STARTED

1. Work on something soft to protect the helmets paint finish.
2. Remove the helmets' Face Shield. Grip hinge of Face Shield and pull upward. Repeat on the other side.
3. Unbuckle the chinstrap.



## FITTING THE PACIFIC RESCUE EYE PROTECTOR

■ Pac Fire recommends fitting the hinge kit to the eye protector, then attaching the eye protector and hinge kit to the headband of the helmet.



PIVOT PLATE




EYE PROTECTOR HINGE

F4a. Identify the Rescue Eye Protector hinge marked "R", fit that to the right hand side of the eye protector.



F4a

F5a. Place channels on the Eye Protector over raised part of the two holes, marked **i.**

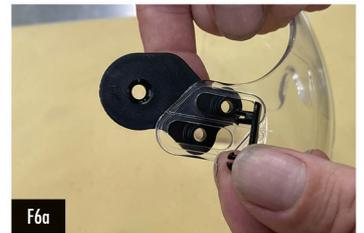

F6a

F6a. Fit the fasteners on pivot plate through the holes. Press together firmly until the fasteners on pivot plate go through holes and are secure.



F8a

F7a. Repeat on the other side of the Eye Protector for the hinge marked "L".

F8a. Expose area of the headband the Rescue Eye Protector will be fitted by undoing the first top and bottom hook of comfort padding on left and right side.




F9a

F9a. Fit Eye Protector into shell with tabs pointing to the outside of shell.

F10a. Place raised part of hinge against raised area on outside of the headband.

F11a. Line up hole on the headband with hole marked **ii.** on the hinge. Secure hinge and headband by fitting 7mm rivet through inside of headband.

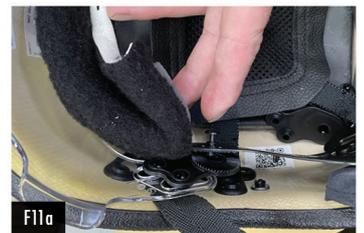

F11a

F12a. Repeat on the other side of the helmet.

F13a. Test the movement of Eye Protector.

F14a. Reattach top and bottom comfort padding unhooked in **step F8a.**

## REMOVING THE RESCUE EYE PROTECTOR

R4. Undo top and bottom hook of comfort padding on the left and right side of the helmet.

R5. Locate 7mm rivet, then push from the outside of the headband till it pops out. Repeat on the other side of the helmet.

R6. The Eye Protector, Hinge and Pivot Plate will detach from the helmet in a single piece. Store Eye Protector in a safe, dry place out of direct sunlight.

R7. Reattach the comfort padding you unhooked in **step R4**.



PAC FIRE RECOMMENDS USING NEW RIVETS & PIVOT PLATES WHEN REPLACING RESCUE EYE PROTECTOR.

## S-1. FITTING THE RESCUE EYE PROTECTOR VIDEO

Follow along with us as we fit the Rescue Eye Protector to a Pacific R6 'Challenger' multi-purpose helmet.



PLEASE SCAN THIS CODE WITH  
YOUR MOBILE PHONE TO  
ACCESS THE VIDEO

